

Fuji Instrumentation & Control





Fuji Electric Systems Co., Ltd.

ECNO:1125r

PXR	Micro Controller PXR					
	[1] Fe	atures	•	п		
F O C1 C2	°C AL1 AL2 AL3	FC	°C		Large LLE Compact	
PV 3	139	R 188		C ALI ALI ALI		
SV •	88.9	51 • 123 SEL A	PV SV+	234 1230	Por any in	
PXR-9	SEL A V		PXR-5		su 12 na	E BBE
	(R9 96mm]	PXR5 [48×96mn		XR7 <72mm]	PXR4 [48×48mm	
option	RS485 communication	Digital input	Alarm 2 points	Heater burnout	Heating/cooling control function	Ramp/soak function Transmission
Larg	e LED d	lisplay	Further enlarged		ort dep	th More compact
5360	C	Fe	°C	Help	- ful for designii	
	23.9	PV PV	1234	(E	PXW4 Existing model)	PXW5 (Existing model)
PXW-4	8 8 8 5 ≏ ≚	SV •				
	xisting model)	FAR 4	PXR4		14.21	
Character height PXI			aihility			
PV display 11n	13mm 17m		excellent	100	Nauto-standard	

Temperature controller PXR

Features	2
Products range	5
Ordering code	,
Specifications	3
Outline diagram/panel-cut1	
Connection diagram 12	2
PXR4 Socket type 14	ł
Functions19)
Sensor fault operation	2
Table of parameters	3

Digital thermostat PAS3

Specifications 28
Outline diagram/panel-cut
Connection diagram

Temperature controller list

2


[1] Features

Manual operation (standard) Available to control MV output with Manual Mode. Temperature Input Boiler **Manual Operation** key output up key output down SSR drive output SSR Heater Except for PXR3 **DIN** rail mounting Front waterproof structure (standard) **DIN rail mounting (PXR3)** The front display and operation section is waterproof in conformity with NEMA-4X:IP66. So the front panel is washable with water. (Use of the attached packing for waterproof is required.) Mountable to a DIN rail using the DIN rail mounting adapter available at option. With this adapter, also mountable to a wall. **Terminal block protecting cover DIN rail mounting (PXR4)** PXR5 PXR9 The terminal block can be protected with the PXR4 terminal cover available at option. · Easy to install the wiring Terminal cover Easy to replace See on page 14.

Diversified control and tuning functions (standard)

Simple ON/OFF control, PID with auto tuning, fuzzy PID with auto tuning and PID with self-tuning are standard with PXR.


• Self-tuning

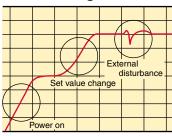

At power on, changing a set value or during external disturbance, tuning is made automatically so that the PID parameters are reoptimized

Note: For some objects to control, PID values could not be optimized.

Fuzzy control

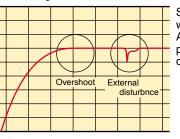


Suppresses the overshoot without wasting start up time. Also, quickly reverts to set points at the event of external disturbances

Micro Controller PXR


More functions

[1] Features

Various functions and abundant options

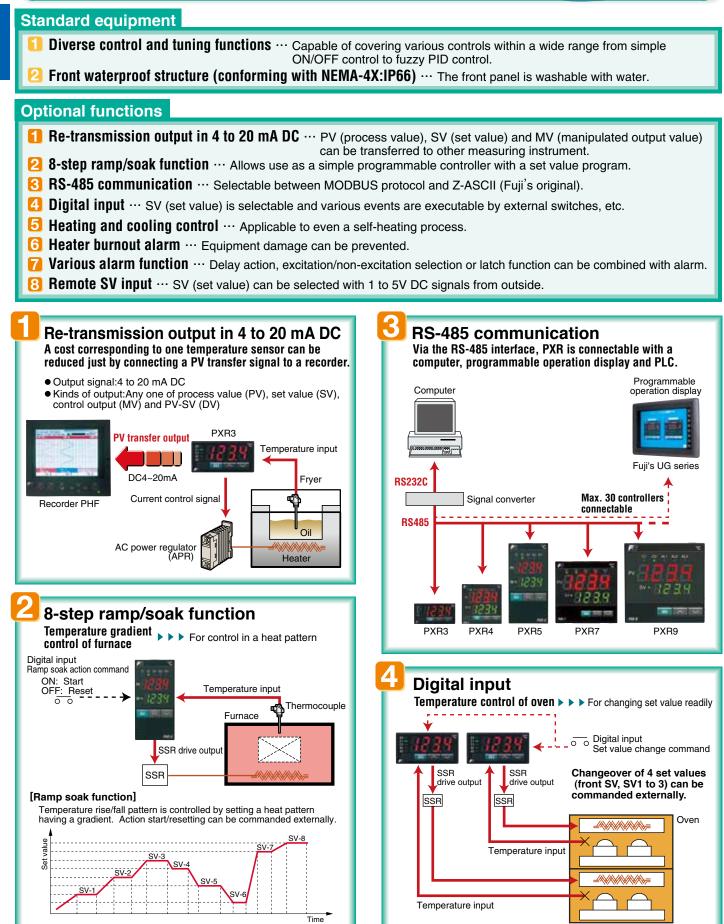

[1] Features

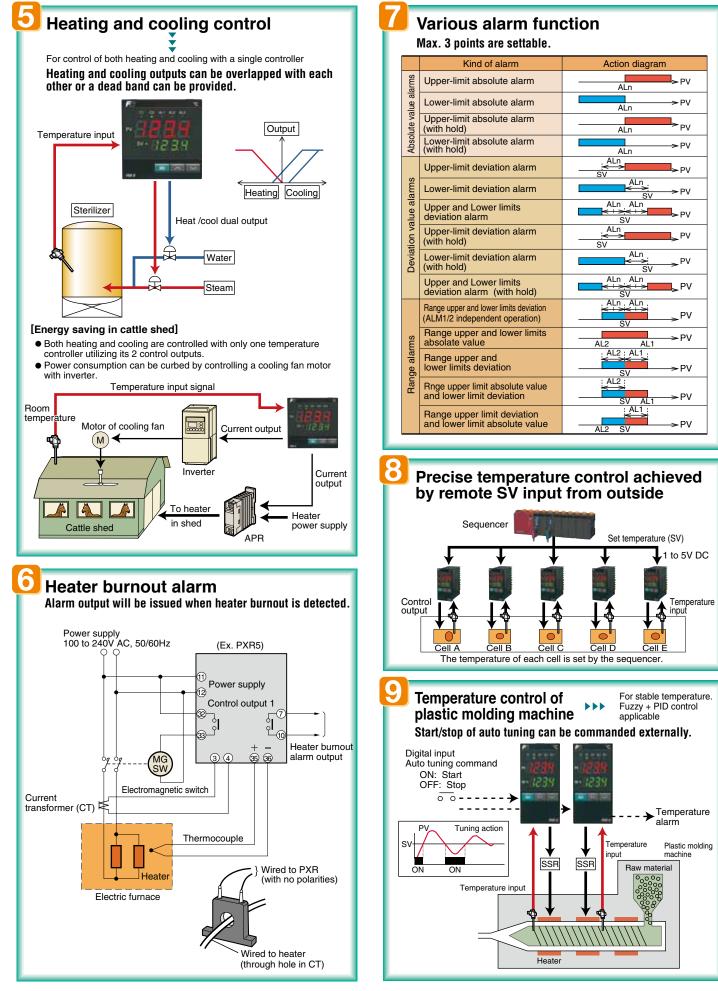

Micro Controller PXR

[2] Products range

Туре			PXR3	PXR4	PXR7	PXR5	PXR9	PXR4 Socket
						12204 12204	HE AR	
External dimensions	Front size Panel depth (with	h watertight packing)	24×48mm 97mm	48×48mm 78.8mm	72×72mm 79.7mm	48×96mm 78mm	96×96mm 79.5mm	48×48mm 84.7mm
Control method	ON/OFF PID with auto tuning Fuzzy PID with auto tuning PID with self-tuning		•	•	•	•	•	•
Input signal	Resistance bulb Thermocouple	ling (PID,fuzzy PID) Pt100 J,K,R,B,S,T,E,N,PLI DC1~5V, DC4~20mA	•	•	•	•	•	•
Output signal	Control output1 (heating)	Relay contact SSR/SSC drive DC4~20mA	• •	•	•	• •	•	• •
	Control output 2 (cooling)	Relay contact SSR/SSC drive DC4~20mA	• •	• • •	• • •	• •	• •	_ _ _
Manual opera Alarm output			– ● (Max. 2 points)	• (Max. 3 points)	• (Max. 3 points)	• (Max. 3 points)	• (Max. 3 points)	• (Max. 2 points)
	ut alarm (option)		_	•	•	•	•	-
8-step ramp s BS-485 comm	oak (option) nunication (option)		•	•	•	•	•	_
Digital input (o	option)		• (Max. 2 points)	• (Max. 2 points)	(Max. 2 points)	(Max. 2 points)	(Max. 2 points)	-
	on (4 to 20mA DC	;)	•	•	•	•	•	—
Remote-Setpo			-	•	•	•	•	-
Power supply AC100~240V 50/60Hz voltage DC24V, AC24V 50/60Hz		•	•	•	•	•	•	
Front waterpro			•	•	•	•	•	•
External termi	inal structure		Plug-in terminal	M3 screw terminal	M3 screw terminal	M3 screw terminal	M3 screw terminal	Socket
DIN rail moun	DIN rail mounting			-	_	-	-	•
Terminal cover			-	•	•	•	•	_
Applicable standards	UL, C-UL CSA		•	•	•	•	•	•
	CE mark		•	•	•	•	•	•

Others



See PXR4 (Socket type) on page 14.

[3] PXR Ordering code

~ ~	40 0		4 5 6 7 8 9 10 11 12 13
24	×48mm Size	PXR	
Digit	Specification	Note	
4	<size front="" h="" of="" w="" x=""></size>		1↓
	24 × 48 mm		3
5	<input signal=""/>		⊻
	Thermocouple °C		
	Thermocouple [°] F		
	RTD Pt100Ω 3-wire type °C		
	RTD Pt100Ω 3-wire type °F		S
	1 to 5V DC		
-	4 to 20mA DC		В
6	<control 1="" output=""></control>		
	Relay contact output		
	SSR/SSC driving output		
7	4 to 20mA DC output <control 2="" output=""></control>		
1	None		¥
	Relay contact output	Note 1	A A
	SSR/SSC driving output	Note 1	Ĉ
	4 to 20mA DC output	Note 1	ĕ♥
8	<revision code=""></revision>	NOLE I	
9	<optional 1="" specifications=""></optional>		· · · · · · · · · · · · · · · · · · ·
Ŭ	None		j j j j j j j j j j j j j j j j j j j
	Alarm 1 point		1
	8 ramp/soak		4
	Alarm 1 point + 8 ramp/soak		5
	Alarm 2 point	Note 2	F
	Alarm 2 point + 8 ramp/soak	Note 2	G
10	<instruction manual=""> <power supply="" voltage=""></power></instruction>		▼
	None 100 to 240V AC		N
	English 100 to 240V AC		v
	None 24V AC/24V DC		c
	English 24V AC/24V DC		В
	<optional 2="" specifications=""></optional>		
	None RS-485 Modbus interface		M 0 0
13			NOO
	RS-485 Z-ASCII interface Re-transmission + Digital input 1 point	N 0	Q 0 0
	Re-transmission + Digital Input point Re-transmission	Note 3	B 0 0
	Digital input 2 points	Note 3	
	RS-485 Modbus interface + Digital input 1 point		V 0 0
	RS-485 Z-ASCII interface + Digital input 1 point		woo
14			
•••	Non-standard parameter setting		
oto	1: Process alarm (2 points) (the codes " F and G " in	the Oth	digit) connet be energified

Note 1: Process alarm (2 points) (the codes " F and G " in the 9th digit) cannot be specified. Note 2: Control output 2 (the codes " A, C, and E " in the 7th digit) cannot be specified. Note 3: Control output 2, communication digital input (2 points), alar (2 points), alar (24 v power supply (the codes " A, C and E " in the 7th digit, " F and G " in the 9th digit, and " A, B, and C " in the 10th digit) cannot be specified.

PXR3 : Optional items

Co	Contents Model						
Ad	Adaptor for Din rail ZZP*CTK		868715	P1			
	48×48mm Size 4 5 6 7 8 9 10 11 12 13 72×72mm Size PXR					2 13	
Digit	Specification		Note		1 1		
4	<front dimensions=""> 48 × 48 mm Screw-terminal type 72 × 72 mm Screw-terminal type</front>			¥ 4 7			
5	<input signal=""/> Thermocouple °C Thermocouple °F Resistance bulb Pt100 3-wire type Resistance bulb Pt100 3-wire type 1 to 5V DC 4 to 20mA DC			¥ T R N S A B			
6	<control 1="" output=""> Relay contact output SSR/SSC driving output 4 to 20mA DC output</control>		Note 1	¥ A C E			
7	<control 2="" output=""> None Relay contact output SSR/SSC driving output 4 to 20mA DC output Re-transmission (4 to 20mA DC) <revision code=""></revision></control>		Note 2 Note 2 Note 2 Note 2 Note 2	Y A C E R			
9	Chevision code> Coptional specifications 1> None Alarm 1 point Alarm for heater break Alarm 1 point + Alarm for heater b 8 ramp/soak Alarm 1 point + Alarm for heater break + Alarm 1 point + Alarm for heater break + Alarm 2 point + Alarm for heater break + Alarm 2 point + 8 ramp/soak Alarm 2 point + 8 ramp/soak Alarm 2 point + 8 ramp/soak Alarm 3 point R-SP R-SP + Alarm 2 point Clastruction Manual for> <power.< p=""></power.<>	oak 8 ramp/soak • 8 ramp/soak	Note 3 Note 3 Note 3 Note 3 Note 3 Note 3		1 9 1 2 3 4 5 6 7 F G G H M D P		
	None100 toEnglish100 toNone24V AEnglish24V A	> 240V AC 240V AC C/24V DC C/24V DC	Note 5 Note 5			¥ N V C B	
	<optional 2="" specifications=""> None RS 485 (Modbus) RS 485 (Z-ASCII) Digital input (1 point) Digital input (2 point) RS 485 (Modbus) + Digital input (1 RS 485 (Z-ASCII) + Digital input (1)</optional>		Note 4			♥ 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0) 0) 0) 0) 0) 0

48	×96mm Size		4 5 6 7 8 9 10 11 12 13
96	×96mm Size	PXR	
Digit	Specification	Note	
4	<front dimensions=""></front>		
	48 × 96mm Screw terminal type		5
	96 × 96mm Screw terminal type		9
5	<input signal=""/>		I <u>¥</u>
	Thermocouple C		
	Thermocouple °F		
	Resistance bulb Pt100 3-wire type °C Resistance bulb Pt100 3-wire type °F		N S S
	1 to 5V DC		
	4 to 20mA DC		
6	<control 1="" output=""></control>		
Ĩ	Relay contact output		
	SSR/SSC driving output		
	4 to 20mA DC output	Note 1	Ē
7	<control 2="" output=""></control>		¥
	None		Ý
	Relay contact output		A
	SSR/SSC driving output		c
	4 to 20mA DC output		L <u>E</u> ↓
8	Re-transmission (4 to 20mA DC)		
9	<revision code=""> <optional 1="" specifications=""></optional></revision>		└── ╵ ↓
9	None		o o o o o o o o o o o o o o o o o o o
	Alarm 1 point		1 1
	Alarm for heater break	Note 2	
	Alarm 1 point + Alarm for heater break	Note 2	3
	8 ramp/soak		4
	Alarm 1 point + 8 ramp/soak		5
	Alarm for heater break + 8 ramp/soak	Note 2	6
	Alarm 1 point + Alarm for heater break + 8 ramp/soak	Note 2	7
	Alarm 2 point		F
	Alarm 2 point + 8 ramp/soak	N 0	G
	Alarm 2 point + Alarm for heater break + 8 ramp/soak Alarm 3 point	Note 2	H H H H H
	R-SP	Note 2	M
	R-SP + Alarm 2 point	Note 2	P
10	<pre></pre>	NOIC L	F +
1	None 100 to 240V AC	Note 4	N N N
	English 100 to 240V AC		v v
	None 24V AC/24V DC	Note 4	c
	English 24V AC/24V DC		В
11	<optional 2="" specifications=""></optional>		***
	None		0 0 0
13	RS485 (Modbus) communication		M 0 0
	RS485 (Z-ASCII) communication		N 0 0
	Digital input 1 point Digital input 2 points	Note 3	\$ 0 0 T 0 0
	RS485 (Modbus) communication + Digital input 1 point	NULE 3	Т 0 0 V 0 0
	RS485 (Z-ASCII) communication + Digital input 1 point RS485 (Z-ASCII) communication + Digital input 1 point		W 0 0
	the control of the state of the		vv 0 0

Note 1: Cannot be combined with heater break alarm. (No. 2, 3, 6, 7 and H on the 9th digit cannot be specified.) Note 2: Cannot be combined with R5485 + 1-point digital input. (YOO and WOO on the 11, 12, and the 13th digits cannot be specified.) Note 3: In the case of 2-point digital input, either of control output 2 or heater break alarm or R-SP can be selected. (2-point digital input, control output 2 + heater break alarm cannot be specified at the same time.) Note 4: The parameter of manual operation is hidden when it is default setting.

The default settings of input signals, measured ranges, and setting values are shown below.

Thermocouple specified : Thermocouple K, Measured range: 0 to 400°C,

Setting value: 0°C Resistance bulb specified : Pt, Measured range: 0 to 150°C, Setting value: 0°C Voltage, Current specified : Scaling: 0 to 100%, Setting value: 0%

In any case other than the description above, specify input signals and measured

The input signals for the thermocouple and the resistance bulb can be switched with the front panel keys.

The default settings of control action is reverse for control output 1 and direct for control output 2.

The reverse and direct actions can be switched with keys on the face panel.

PXR4/5/9 : Optional items

Contents	Model
Terminal Cover	PXR4/7 : ZZP PXR1-A230
	PXR5/9 : ZZP PXR1-B230
CT for heater burnout alarm	1~30A: ZOZ*CCTL-6-S-H
	20~50A: ZOZ*CCTL-12-S36-8

- Note 1: Cannot be combined with heater break alarm. (2, 3, 6, 7, H cannot be specified on 9th digit.) Note 2: In case of the combination 9th digit code:3, 7, F, G, H, M or P and PXR4 the following

Note 2: In case of the combination and light code:3, 7, F, G, H, M of P and PXH4 the following installation condition are required.
 1) Max.ambient temperature: 40°C
 2) Individual mounting. (Side-by-side mounting is not allowed.)
 Note 3: Cannot be combined with R5485 + 1-point digital input. (V and W cannot be specified on 11th digit.)
 Note 4: In the case of control output 2, either of heater break alarm or remote SV input can be selected.

(A, C, E and R on the 7th digit, and 2,3,6,7,H, D and P on the 9th digit cannot be specified.)
 Note 5: The parameter of manual operation is hidden when it is default setting.

Micro Controller PXR

[4] Specifications

General specifications

General speci	lications	
Power supply voltage	100 V (-15%) to 240 V (+10%) AC, 50/60 Hz or	
	24 V (±10%) AC 50/60 Hz, 24 V (±10%) DC	
Power consumption	When using 100 V AC: 6 VA (PXR3),8 VA (PXR4,7),10 VA (PXR5,9)	
	When using 220 V AC: 8 VA (PXR3),10 VA (PXR4,7),12 VA (PXR5,9)	
	When using 24 V AC/DC: 8 VA (PXR3), 10VA (PXR4,7), 12VA (PXR5,9)	
nsulation resistance 20 M Ω or more (500 V DC)		
Dielectric strength	Power supply-ground 1500 V AC for 1 min	
	Power supply-others 1500 V AC for 1 min	
	Ground-relay output 1500 V AC for 1 min	
	Ground-alarm output 1500 V AC for 1 min	
	Others 500 V AC for 1 min	
Input impedance	Thermocouple: 1 M Ω or more	
	Voltage: 450 Ω k or more	
	Current: 250 Ω (external resistor)	
Allowable signal	Thermocouple: 100 Ω or less	
source resistance	Voltage: $1k\Omega$ or less	
Allowable wiring	Resistance bulb: 10Ω or less per wire	
resistance		
Reference junction	±1°C (at 23°C)	
compensation accuracy		
Input value correction	±10% of measuring range	
Set value correction	±50% of measuring range	
Input filter	0 to 900.0 sec settable in 0.5 sec steps (first order lag filter)	
Noise reduction ratio	Normal mode noise (50/60 Hz): 50 dB or more	
	Common mode noise (50/60 Hz): 140 dB or more	
Applicable standards	UL (UL873)	
	CSA (C22.2 No.24-93) Not available on 72x72mm size	
	CE mark (LVD : EN61010-1, EMC : EN61326-1)	

Control function of standard type

	<i>2</i> 1
Control action	PID control (with auto tuning, self-tuning)
	Fuzzy control (with auto tuning)
Proportional band (P)	0 to 999.9% of measuring range settable in 0.1%
	steps
Integral time (I)	0 to 3200 sec settable in 1 sec steps
Differential time (D)	0 to 999.9 sec settable in 0.1 sec steps
On/off action if $P = 0$	 Proportional action when I, D = 0.
Proportional cycle	1 to 150 sec settable in 1 sec steps
	Only for relay contact output or SSR/SSC drive output
Hysteresis width	0 to 50% of measuring range
	For On/off action only
Anti-reset windup	0 to 100% of measuring range
	Automatically validated at auto tuning
Input sampling cycle	0.5 sec
Control cycle	0.5 sec

Input section

Input signal	Thermocouple : J, K, R, B, S, T, E, N, PLII	
	Resistance bulb : Pt100	
	Voltage, current: 1 to 5 V DC, 4 to 20 mA DC	
	(Apply current input after connecting the furnished	
	250Ω resistor to input terminal.)	
Measuring range	See measuring range table	
Burnout For thermocouple or resistance bulb input Cor		
	output upper/lower are selectable	

■ Output section of standard type (control output 1)

Control output 1	Select one as follows	
	Relay contact: SPDT contact:	
	220V AC/30V DC, 3A (resistive load)	
	For PXR3, SPST contact	
	Mechanical life 10 million operations (no load)	
	Electrical life 100,000 operations (rated load)	
	Minimum switching current 100mA (24V DC)	
	For PXR3, 10 mA (5 V DC)	
	SSR / SSC drive (Voltage pulse):	
	ON: 17 to 25 V DC, For PXR3, 12 to 16 V DC	
	OFF: 0.5V DC or less	
	Max. current: 20mA or less	
	4 to 20mA DC: Allowable load resistance 600Ω or less	
	For PXR3, 100 to 500Ω	

Control functions of heating/cooling control type (option)

	is of neating/cooling control type (option)
Control action	PID control (with auto tuning)
Heating side	0 to 999.9 % of measuring range
proportional band (P)	
Cooling side	Heating side "P" × cooling side coefficient
proportional band (P)	(Automatically set in auto tuning)
	Cooling side proportional band coefficient: 0 to 100.0
	On/off action if P=0
Integral time (I)	0 to 3200 sec (common to heating and cooling sides)
Differential time (D)	0 to 999.9 sec (common to heating and cooling sides)
P,I,D=0:ON/OFF action (without dead band) for heating and cooling	
I,D=0:Proportional action	
Proportional cycle	1 to 150 sec
	For relay contact output or SSR/SSC drive output only
Hysteresis width	0.5% of measuring range common to heating and
	cooling sides, For On/off action only
Anti-reset windup	0 to 100% of measuring range
	Automatically validated at auto tuning
Overlap, dead band	$\pm 50\%$ of heating side proportional band
Input sampling cycle	0.5 sec
Control cycle	0.5 sec
Manual operation	Manual operation -3 to 103% (except for PXR3)

Output section of heating/cooling control type (control output 2) (option)

For PXR3, 100 to 500Ω

Operation and display section

Parameter setting	Digital setting by 3 keys
method	With key lock function
Display	Process value/set value Selective display
	(PXR3 : Single display)
	4 digits, 7-segment LED
Status display LED	Control output, process alarm output, Heater
	burnout alarm output (unavailable for PXR3)
Setting accuracy	0.1% or less of measuring range
Indication accuracy	Thermocouple: (0.5% of measuring range)
(at 23°C)	1 digit 1°C
	For thermocouple R at 0 to 500°C
	(1% of measuring range) 1 digit 1°C
	For thermocouple B at 0 to 400°C
	(5% of measuring range) 1 digit 1°C
	Resistance bulb, voltage/current:
	(0.5% of measuring range) 1 digit

Alarm (option)

	,
Alarm kind	Absolute alarm, deviation alarm, zone alarm
	with upper and lower limits for each
	Hold function available (see page 15)
	Alarm latch, Excitation/non-excitation selecting
	function provided
Alarm ON-delay	Delay setting 0 to 9999 sec settable in 1 sec steps
Process alarm output	Relay contact: SPST contact: 220 V AC/30 V DC,
	1 A (resistive load)
	Mechanical life 10 million operations (no load)
	Electrical life 100,000 operations (rated load)
	Minimum switching current 100 mA (5 V DC)
	For PXR3, 10 mA (5 V DC).
	MAX 2 points (PXR3), MAX 3 points (PXR4, 5, 7, 9) output cycle 0.5 sec

[4] Specifications

Heater burnout alarm (option, unavailable for PXR3)

Heater current	Current detector: CTL-6-S-H for 1 to 30 A /
detection (option),	CTL-12-S36-8 for 20 to 50 A
unavailable for PXR3	Current detection accuracy: 10% of measuring range
	Alarm settable range: 1 to 50 A
	Available only when control output is relay contact
	or SSR/SSC drive.
	However, detection is possible when control output
	ON lasts 500 ms or longer.
Heater burnout alarm	Relay contact: SPST contact:
output	220 V AC/30 V DC, 1 A (resistive load)
unavailable for PXR3	Mechanical life 10 million operations (no load)
	Electrical life 100,000 operations (rated load)
	Minimum switching current 100 mA (24 V DC)
	1 output, output updating cycle 0.5 sec

Digital input (option)

Points	1 or 2
Electrical specifications	5 V DC, approx. 2 mA (OFF judgment for 3 V DC
	or more, ON judgment for 2 V DC or less)
Input pulse width	Min. 0.5 sec
Function	Set value (front SV, SV1 to 3) changeover
(any one settable)	Control action start/stop
	Ramp/soak action start / reset
	Auto tuning start / stop
	Alarm latch cancel and built-in timer start

■ Timer function (option)

Start	By digital input
Setting	0 to 9999 sec settable in 1 sec steps
Action	Event ON-delay or OFF-delay
Signal output	Alarm output relay used. Up to 3 points available.

Communication function (option)

Physical specifications	
Communication protocol	Modbus [™] RTU mode or PXR protocol (Z-ASCII)
Communication method	2 wire method. Half duplex bit serial, start-stop sync type.
Data type	8 bits. Parity: odd/even/none.
Communication rate	9600bps
Connection aspect	multi-drop/up to 32 controllers connectable including master station
Communication distance	Total extension 500 m or less.
RS232C / RS485	Isolated type
Signal converter	Manufacturer: SYSMEX RA Co.,Ltd (Japan)
(recommendation)	Model: RC-770X
	http://www.sysmex-ra.co.jp
	Manufacturer: OMRON Co., Ltd (Japan)
	Model: K3SC-10
	http://www.omron.co.jp/

Re-transmission output function (option)

Output signal	DC 4-20mA
Load resistance	500 Ω or less (PXR3), 600 Ω or less (PXR4, 5, 7, 9)
Output updating	500ms
Output accuracy	0.3% FS (at 23°C)
Resolution	2000 or more
Kind of output signal	Any one among PV, SV, DV and MV
	(selectable by parameter)

Remote setpoint

(option, not available on 24x48mm size)

Input signal	1 to 5 V DC, 1 point
Accurcy	±0.5% 1 digit (at 23°C)
Input sampling cycle	0.5 sec
Input scaling	Allowed
Display of remote mode	LED on Front panel
Input impedance	1M Ω or more

Other functions

Parameter mask function	Parameter display is disabled by software.
Ramp/soak function (option)	2 program pattern of 4 steps each, or 1 program parttern × 8 steps Digital input allows to start/reset the action.

Power failure processing

Memory protection	Held by non-volatile memory

Self-check

Method Program error supervision by watchdog timer	
--	--

Operation and storage conditions

Ambient operating	-10°C to 50°C
temperature	
Ambient operating	Less than 90% RH (no condensation)
humidity	
Storage temperature	-20°C to 60°C

Optional items

Current detector (CT)	For 1 to 30 A: CTL-6-S-H
(unavailable for PXR3)	For 20 to 50 A: CTL-12-S36-8 (see page 17)
DIN rail mounting	ZZP*CTK368715P1 (for outline diagram, see page 11)
adapter (for PXR3)	
Terminal cover	PXR4 : ZZPPXR1-A230
	PXR5/9 : ZZPPXR1-B230
	(for outline diagram, see page 11)
Instruction manual	For communication function
	(see list of related documents on page 10)

Structure

Mounting method	Panel flush mounting
	PXR3 can be mounted to rail/wall by using the
	DIN rail mounting adapter available at option.
External terminal	Plug-in terminal (PXR3) or M3 screw terminal (PXR4, 5, 7, 9)
Case material	Plastic (non-combustible grade UL94V-0 equivalent)
Dimensions	See the outline diagram on page 11.
Weight	Approx. 150 g (PXR3), 200 g (PXR4), 250g (PXR7)
	300 g (PXR5), 300 g (PXR9)
Protective structure	Front waterproof structure: NEMA4X (IEC standard
	IP66 equivalent)(when mounted on panel with our
	genuine packing. Waterproof feature unavailable
	in close mounting of multiple units)
	Rear case: EC IP20
Outer casing	Black (front frame, case)

Scope of delivery

Scope of delivery	Controller, panel mounting bracket, front watertight
	packing, instruction manual, 250 resistor
	(for current input)

Measuring range table

input s	ignal	measuring range(°C)	measuring range(°F)					
resistance bulb	Pt100	-199 to 850 *	-326 to 1562					
Thermocouple	J	0 to 800	32 to 1472					
	К	0 to 1200	32 to 2192					
	R	0 to 1600	32 to 2912					
	В	0 to 1800	32 to 3272					
	S	0 to 1600	32 to 2912					
	Т	-150 to 400	-238 to 752					
	E	-150 to 800	-238 to 1472					
	Ν	0 to 1300	32 to 2372					
	PLII	0 to 1300	32 to 2372					
DC voltage	1 to 5V	scaling range	-1999 to 9999					
DC current	4 to 20mA							

Note 1: For current input connect the supplied 250Ω resister at the input terminal. Note 2: When the measuring range exceeds 1000°C (1832°F), decimal point cannot be used.

* PXR3' s Measuring range for Pt100 is -150 to 850°C (-238 to 1562°F)



Micro Controller PXR

[4] Specifications

Insulation block diagram

Power supply section	Measurement input Heater current detector input	
Relay contact control output 1	Remote SV input Internal circuit	
Relay contact control output 2	Voltage pulse, 4 to 20mA DC control output 1	Note: Basic insulation (dielectric
Alarm relay output 1	Voltage pulse, 4 to 20mA DC control output 2 Transfer output	strength 1500 V AC) between blocks delimited by line —
Alarm relay output 2	Digital input (In case of Re-Transmission by PXR3)	Functional insulation (dielectric
Alarm relay output 3 or heater break alarm output (PXR3 not included)	Communication (RS-485) Digital input (In case of Re-Transmission by PXR3, 4, 5, 7, 9)	strength 500 V AC) between blocks delimited by line Non isolated between blocks which are not delimited from each other.

Caution in use Control output

Model	Voltage puls (for SSR drive)	DC 4 to 20 mA
	Voltage	Max. Current	Allowable load resistance
PXR3	15V DC	20mA	100 to 500Ω
PXR4, 5, 7, 9	24V DC	20mA	600Ω or less
PXV3	5.5V DC	20mA	600Ω or less
PXV	24V DC	60mA	600Ω or less
PXW	24V DC	60mA	600Ω or less
PXZ	24V DC	60mA	600Ω or less

Differences from other models are listed at left. For replacement, check is required to see if the specifications of control end are satisfied.

List of related documents

		PXR3	PXR4, 7	PXR5	PXR9			
Instruction manu	ıal	TN1PXR3-E	TN1PXR-E	TN1PX	R5/9-E			
Operation manua	al	ECNO:409		ECNO:406				
Communication	MODBUS	TN512642-E						
function manual	Z-ASCI	TN512644-E						


*The above documents can be downloaded from our Internet home page. http://www.fic-net.jp/eng


Mounting to DIN rail (PXR3 only)


Mountable to a DIN rail using the DIN rail mounting adapter available at option. With this adapter, also mountable to a wall.

Terminal cover (PXR4, 5, 9)

The terminal block can be protected by the terminal cover available at option.

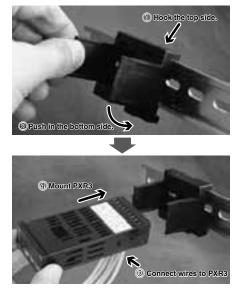


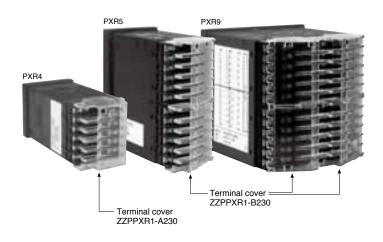

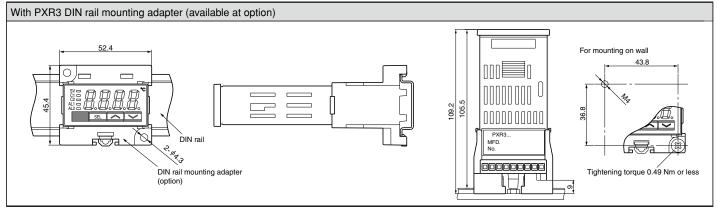


Caution on drilling in panel: In case of coating, etc. after drilling, the above dimensions must be followed in the finished status. **10**

[5] Outline and Panel Cutout Dimensions

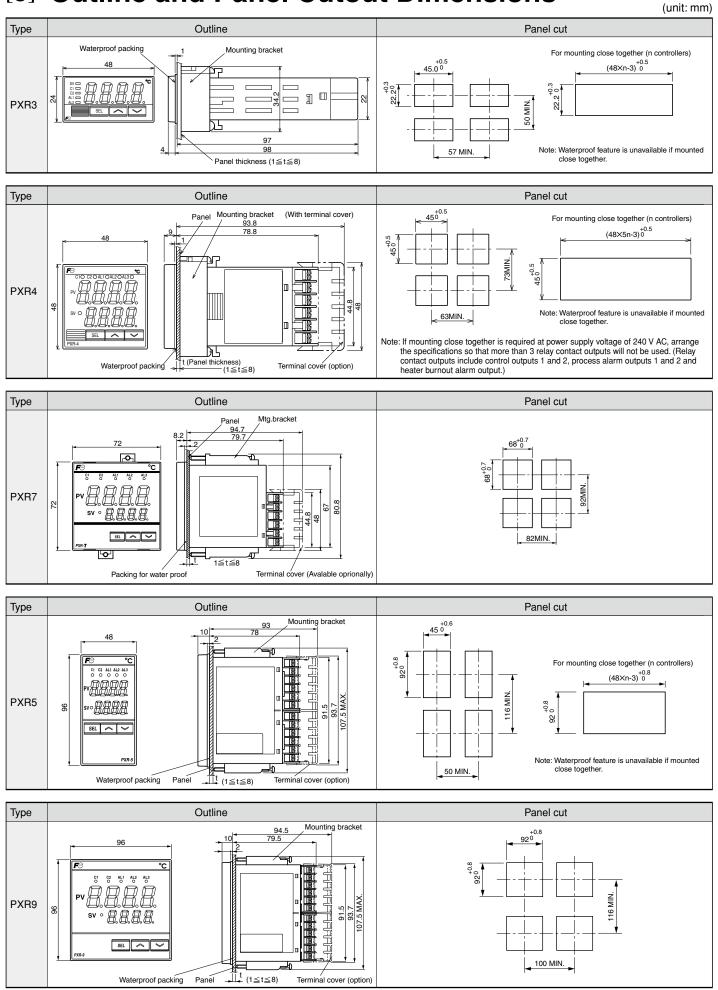


Micro Controller PXR


[6] External connection diagram

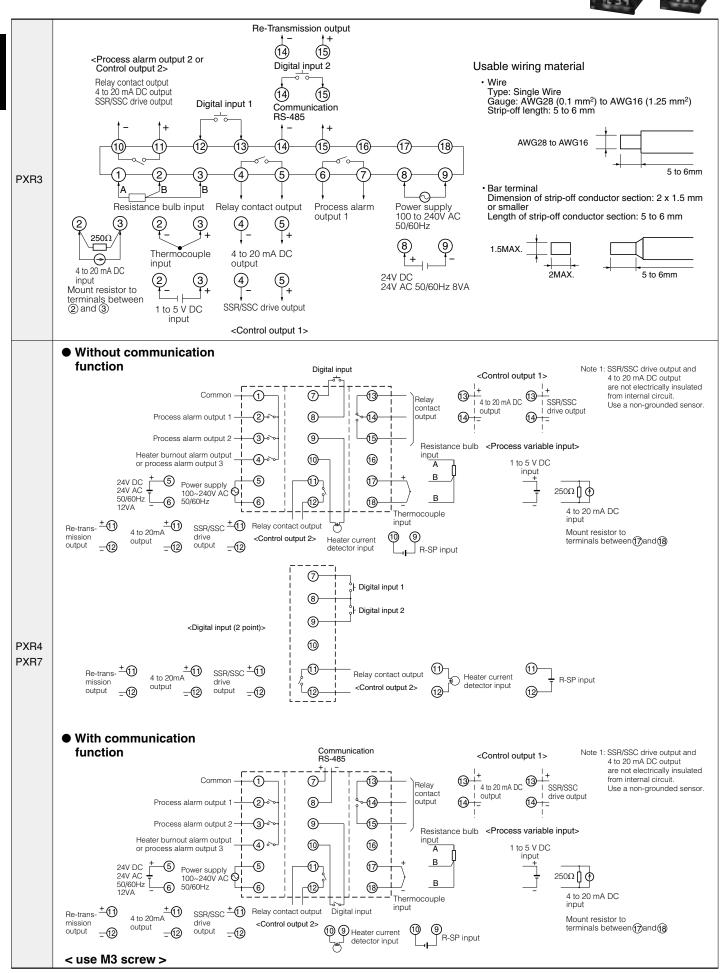



[6] External connection diagram

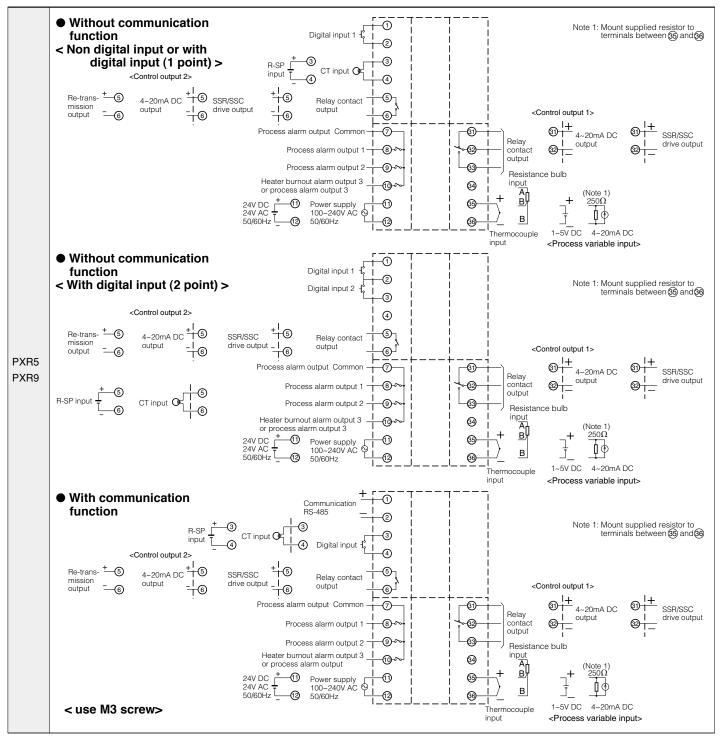

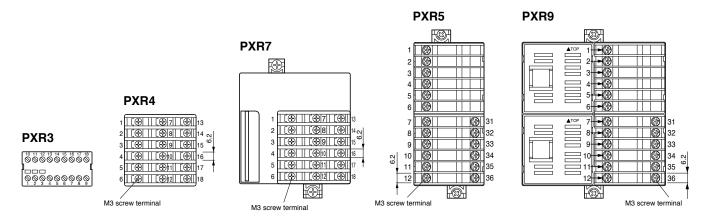

Micro Controller PXR


[7] PXR4 Socket type ordering code

So	cket type	PXR	4		S	1	—					
Digit		Note										
4	<pre>Specification </pre>	Note										
4			Y									
-	48 × 48mm (Socket type)		4	/				-	+	-	-	
5	<input signal=""/>		-	.								
	Thermocouple °C		Т									
	Thermocouple °F	Note 5	R	-								
	Resistance bulb Pt100 3-wire type I (°C)	Note 5	N	-								
	Resistance bulb Pt100 3-wire type I (°F)	Note 5	S									
	1 to 5V DC		A									
	4 to 20mA DC	Net	В									
	Resistance bulb Pt100 3-wire type II (°C)	Note 6	W	<u>v</u>	-	_			-	-	-	+
6	<control 1="" output=""></control>			Ţ								
	Relay contact output			A								
	Voltage pulse output (24V DC)			С								
	4 to 20mA DC output			E	1			_	-	-		
7	<terminal form=""></terminal>				Y	\checkmark						
	Socket type				s	<u> </u>		_	+	-	-	
8	<revision code=""></revision>					1			-	<u> </u>		
9	<optional specifications=""></optional>							V				
	None							0				
	Alarm (1 pc.)							1				
	Ramp-soak							4				
	Alarm (1 pc.) + Ramp-soak							5				
	Alarm (2 pcs.)							F				
	Alarm (2 pcs.) + Ramp-soak							G			-	
10	<instruction manual=""> <power supply="" voltage=""></power></instruction>								۲			
	None 100 to 240V AC								Ν			
	English 100 to 240V AC								v			
	None 24V AC/24V DC								С			
	English 24V AC/24V DC								В			<u> </u>
11	<socket></socket>)	¥)	(Y
12	None								(0 (0	0
13	For rail mounting (8-pin screw terminal)	Note 1							1	1 (0	0
	For panel mounting (8-pin screw terminal)	Note 2							2	2 (0	0
	For rail mounting (11-pin screw terminal)	Note 3							4	4 (0	0
	For panel mounting (11-pin screw terminal)	Note 4								5 (0	0



rance of various sockets



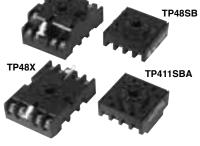

Note1) Type: TP48X Note2) Type: TP48SB Note3) Type: TP411SBA Note5) Input terminal (Pt100 input) assignment is same as PXW4/PXZ4/PXV4. Note6) Input terminal (Pt100 input) assignment is different from PXW4/PXZ4/PXV4, but in case of thermocouple input terminal assignment is same.

Input signal, measurement range, and set value at the time of deliver are as follows. When thermocouple is specified: Thermocouple K, Measurement range; 0 to 400°C, Set value; 0°C

Set value; 0°C When resistance bulb is specified: Pt, Measurement range; 0 to 150°C, Set value; 0°C When voltage/current is specified: Scaling; 0 to 100%, Set value; 0% For the cases other than the above, specify input signal and measurement range. Input signal of the thermocouple and the resistance bulb can be switched by key operation on the front panel.

Control action is set to reverse action when delivered. The reverse action and normal action can be switched by key operation on the front panel.



[8] Specifications

General specifications

lications
100 V (-15%) to 240 V (+10%) AC, 50/60 Hz
or 24 V (±10%) AC 50/60 Hz, 24 V (±10%) DC
When using 100 V AC: 8 VA or less
When using 220 V AC: 10 VA or less
When using 24 V AC/DC: 10VA
20 MΩ or more (500 V DC)
Power supply-ground 1500 V AC for 1 min
Power supply-others 1500 V AC for 1 min
Ground-relay output 1500 V AC for 1 min
Ground-alarm output 1500 V AC for 1 min
Others 500 V AC for 1 min
Thermocouple: 1 M Ω or more
Voltage: 450 k Ω or more
Current: 250 Ω (external resistor)
Thermocouple: 100 Ω or less
Voltage: 1 k Ω or less
Resistance bulb: 10Ω or less per wire
±1°C (at 23°C)
±10% of measuring range
±50% of measuring range
0 to 900.0 sec settable in 0.5 sec steps
(first order lag filter)
Normal mode noise (50/60 Hz): 50 dB or more
Common mode noise (50/60 Hz): 140 dB or more

■ Control function of standard type

PID control (with auto tuning, self-tuning)					
Fuzzy control (with auto tuning)					
Self tuning					
0 to 999.9% of measuring range settable in					
0.1% step					
0 to 3200 sec settable in 1 sec step					
0 to 999.9 sec settable in 0.1 sec step					
 Proportional action when I, D = 0. 					
1 to 150 sec settable in 1 sec step					
Only for relay contact output or SSR/SSC drive					
output					
0 to 50% of measuring range					
For On/off action only					
0 to 100% of measuring range					
Automatically validated at auto tuning					
0.5 sec					
0.5 sec					

■ Input section

Input signal	Thermocouple : J, K, R, B, S, T, E, N, PLII Resistance bulb : Pt100 Voltage, current: 1 to 5 V DC, 4 to 20 mA DC (Apply current input after connecting the			
	furnished 250 Ω resistor to input terminal.)			
Measuring range	See measuring range table (Table1)			
Burnout	For thermocouple or resistance bulb input Control output upper/lower are selectable			

■ Output section of standard type (control output 1)

Control output 1	Select one as follows
	Relay contact: SPDT contact:
	220V AC/30V DC, 3A (resistive load)
	Mechanical life 10 million operations (no load)
	Electrical life 100,000 operations (rated load)
	Minimum switching current 100mA (24V DC)
	SSR / SSC drive (Voltage pulse):
	ON: 17 to 25 V DC
	OFF: 0.5V DC or less
	Max. current: 20mA or less
	4 to 20mA DC: Allowable load resistance 600Ω
	or less

Operation and display section

Parameter setting	Digital setting by 3 keys			
method	With key lock function			
Display	Process value/set value Independent display			
	4 digits, 7-segment LED			
Status display LED	Control output, process alarm output			
Setting accuracy	0.1% or less of measuring range			
Indication accuracy	Thermocouple: ±(0.5% of measuring range)			
(at 23°C)	±1 digit ±1°C			
	For thermocouple R at 0 to 500°C			
	± (1% of measuring range) ±1 digit ±1°C			
	For thermocouple B at 0 to 400°C			
	\pm (5% of measuring range) \pm 1 digit \pm 1°C			
	Resistance bulb, voltage/current:			
	± (0.5% of measuring range) ±1 digit			

■ Alarm (option)

Alarm kind	Absolute alarm, deviation alarm, zone alarm			
	with upper and lower limits for each			
	Hold function available (See the figure below.)			
	Alarm latch, Excitation/non-excitation			
	selecting function provided			
Alarm ON-delay	Delay setting 0 to 9999 sec settable in 1 sec			
	steps			
Process alarm	Relay contact: SPST contact: 220 V AC/30 V DC,			
output	1 A (resistive load)			
	Mechanical life 10 million operations (no load)			
	Electrical life 100,000 operations (rated load)			
	Minimum switching current 100 mA (5 V DC)			
	MAX 2 points output cycle 0.5 sec			

■ Other functions

Parameter mask	Parameter display is disabled by software.	
function		
Ramp/soak	2 program pattern of 4 steps each, or 1	
function (option)	program pattern × 8 steps	
	Digital input allows to start/reset the action.	

■ Power failure processing

Memory protection Held by non-volatile memory

Self-check

Program error supervision by watchdog timer	Method	Program error supervision by watchdog timer	
---	--------	---	--

Operation and storage conditions

Ambient operating	-10°C to 50°C
temperature	(In low-temperature environment, start-up
	time may vary in power activation.)
Ambient operating	Less than 90% RH (no condensation)
humidity	
Storage temperature	-20°C to 60°C

Structure

Mounting method	Panel flush mounting, DIN rail mounting. (Mounting socket is required for mounting DIN rail.)	
External terminal	8 pins or 11 pins terminals (Socket is required for wiring separately.)	
Case material	Plastic (non-combustible grade UL94V-0 equivalent)	
Dimensions	$48 \times 48 \times 84.7$ mm	
Weight	Approx. 200 g	
Protective structure	Front waterproof structure: NEMA4X (IEC standard IP66 equivalent) (when mounted on panel with our genuine packing. Waterproof feature unavailable in close mounting of multiple units) Rear case: IEC IP20	
Outer casing	Black (front frame, case)	

Micro Controller PXR

[8] Specifications

Table 1 Measuring range table

		<u> </u>		
Group	input si	gnal	measuring range(°C)	measuring range(°F)
	Resistance bulb	Pt100	-150 to 850	-238 to 1562
	Thermocouple	J	0 to 800	32 to 1472
		К	0 to 1200	32 to 2192
		R	0 to 1600	32 to 2912
		В	0 to 1800	32 to 3272
		S	0 to 1600	32 to 2912
		Т	-150 to 400	-238 to 752
		E	-150 to 800	-238 to 1472
		Ν	0 to 1300	32 to 2372
		PLI	0 to 1300	32 to 2372
ш	DC voltage	1 to 5V	scaling range	-1999 to 9999
	DC current	4 to 20mA		

Note 1: For current input connect the supplied 250Ω resister at the input terminal.

Note 2: Setting cannot be changed to a different group. Note 3: When the measuring range exceeds 1000°C (1832°F), decimal point cannot be used.

■ Scope of delivery

Scope of delivery	Controller, panel mounting bracket,	
	watertight packing, instruction manual (as	
	ordered), socket (as ordered), 250 Ω resistor	
	(for current input)	

Insulation block diagram

Power supply section	Measurement input
Relay contact control output 1	Internal circuit
Alarm relay output 1, 2	Voltage pulse, 4 to 20mA DC control output 1


Note: Basic insulation (dielectric strength 1500 V AC)

between blocks delimited by line Functional insulation (dielectric strength 500 V AC)

between blocks delimited by line ----


Non isolated between blocks which are not delimited from each other.

[9] Outline and Panel Cutout Dimensions

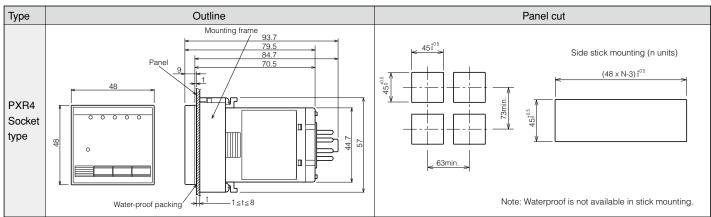

[10] Socket Outline Diagram (unit: mm)


Without alarm

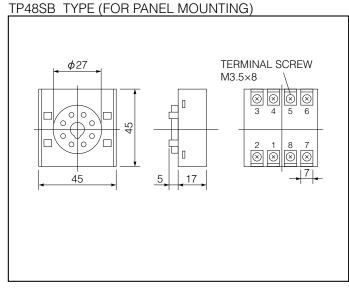

TERMINAL SCREW M3.5×8 5.5 S $\otimes \otimes$ 6 3 4 00 4 \odot C) 2 35. Ē ñ \neg П 7 8 2 2-**¢**4.5 HOLE 1 Ē \otimes \otimes \otimes \otimes 7.8 50 20.3 MAX. 40±0.2 2-**\$**4.5 MOUNTING HOLE


With alarm

TP411X TYPE (FOR RAIL MOUNTING)

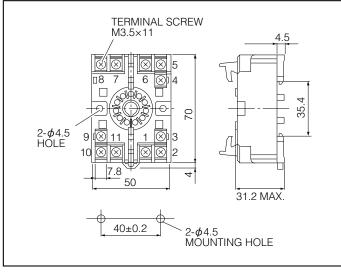

TP411SBA TYPE (FOR PANEL MOUNTING)

TP48X TYPE (FOR RAIL MOUNTING)

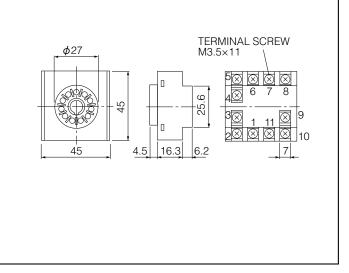

17


Micro Controller PXR

[11] External connection diagram

(1) With alarm functions 11-pin socket


When compatible with PXW4/PXZ4/PXV4 thermocouple input terminal

(When either one of the following is selected for the 5th digit of the code symbols: "T," "R," "W," "A" and "B") Note that the terminal layout of the resistance bulb input type differs from that of PXW4/PXZ4/PXV4.

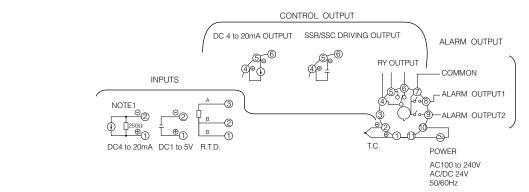

When compatible with PXW4/PXZ4/PXV4 resistance bulb input terminal


(When either one of the following is selected for the 5th digit of the code symbols: "N" and "S") Note that the terminal layout of the thermocouple input type differs from that of PXW4/PXZ4/PXV4.

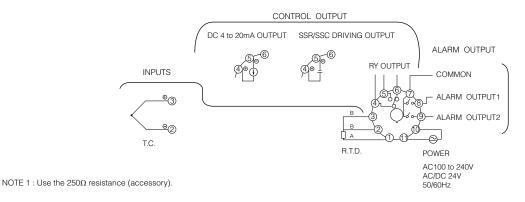

(2) Without alarm functions 8-pin socket


When compatible with PXW4/PXZ4/PXV4 thermocouple input terminal

(When either one of the following is selected for the 5th digit of the code symbols: "T," "R," "W," "A" and "B") Note that the terminal layout of the resistance bulb input type differs from that of PXW4/PXZ4/PXV4.

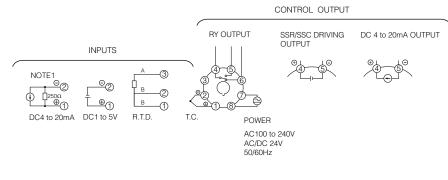

When compatible with PXW4/PXZ4/PXV4 resistance bulb input terminal

(When either one of the following is selected for the 5th digit of the code symbols: "N" and "S") Note that the terminal layout of the thermocouple input type differs from that of PXW4/PXZ4/PXV4.

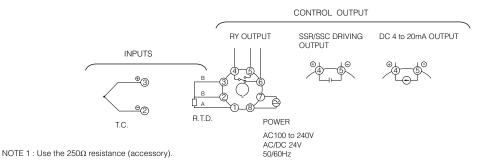

[12] Functions

Function0 Manual Operation

This function is selectable operation mode either "Auto" or "Manual" operation by change the parameter.

- MV output value is changeable by manual operation on Manual mode. • Operation mode is stored while power down.
- Changeover method: Auto \rightarrow Manual: Balanceless bump less
- Manual → Auto: Balance bump less • MV setting value resolution: 1%(Settable by front key)
- MV setting value resolution: 1%
 MV setting range: -3~103%
- Auto-tuning and Self-tuning are not available while manual operation mode.


Function1 Control function


Fuzzy control function

Fuzzy operation is used to suppress overshoot so that the response to external disturbances is improved. By monitoring process value, overshoot is suppressed with the startup

disturbances is also improved.

• Comparison between fuzzy control and conventional control

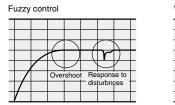


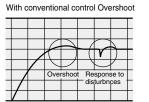

On/off action (2-position action)


When process value (PV) is below the set value (SV), output is turned on and the heater is energized as shown below. When PV is above SV, output is turned off and the heater is de-energized. In this way, output is

turned on/off repeatedly with respect to the SV to keep the temperature constant. This method of control is called "on/ off action (2-position action)." • When "0" is assigned to parameter P, the on/off action will be selected.

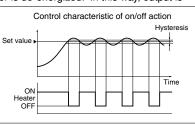

Point On/off action hysteresis setting

In on/off control, output turns on/off with respect to the set value. Therefore, output would change frequently in response to a slight change in the temperature. This might shorten the service life of the output relay and adversely affect the equipment connected with the temperature controller. To prevent this, a gap (hysteresis) is provided in the on/off action. This action gap is usually called "hysteresis."

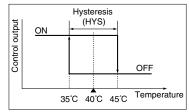


Example 1) Suppose that the temperature controller has a measuring range of 0 to 150°C and a hysteresis (HYS) of 10. When the set value is adjusted to 40°C, the heater turns off at 45°C and turns on at 35°C. Example 2) For turning off the heater at 45°C in the figure at left, parameter [SVOF] should be set at ".5° Then the heater

should be set at "-5." Then, the heater turns off at 45°C and turns on at 35°C. (The above action is effective when the ONOFF parameter is set at OFF.)


Point Changeover of output action

Direct action or reverse action is settable by parameter [P-n1].

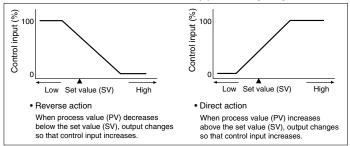

Heating / cooling control (option)


By a single controller both heating and cooling control output are obtained. (Both control outputs 1 and 2 are used.)

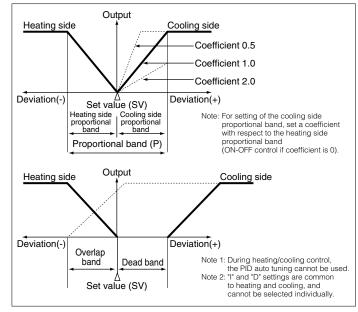


Function2 PID tuning function

Auto-tuning (AT)

PID parameters are autometically set by the controller's measurement and computation function. This instrument provides 2 types of auto-tuning functions; the standard type(auto-tuning with SV used as reference) and the low SV type(auto-tuning with the value 10% below SV used as reference).

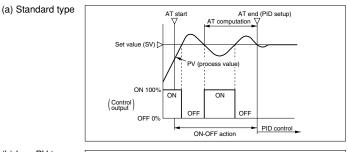


(b) Low PV type

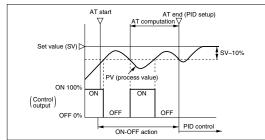

Self-tuning function

At power on, changing a set value or during external disturbance, tuning is made automatically so that the PID parameters are reoptimized.

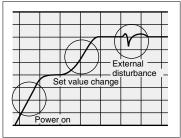

Note: For some objects to control, PID values could not be optimized.



Micro Controller PXR

[12] Functions

Function3 Alarm (option)

• Kind of alarm and alarm type code

	ALM1	ALM2	ALM3	Alarm type	Operation figure
	0	0	0	No alarm	PV
Absolute value alarm	1	1	1	Upper-limit absolute value	ALn PV
alarm	2	2	2	Lower-limit absolute value	ALn PV
	3	3	3	Upper-limit absolute value (with hold)	ALn PV
	4	4	4	Lower-limit absolute value (with hold)	ALn PV
Deviation value alarm	5	5	5	Upper-limit deviation	ALn SV
alaini	6	6	6	Lower-limit deviation	ALn SV PV
	7	7	7	Upper and lower limits deviation	ALn ALn SV
	8	8	8	Upper-limit deviation (with hold)	SV
	9	9	9	Lower-limit deviation (with hold)	ALn SV PV
	10	10	10	Upper and lower limits deviation (with hold)	ALn ALn SV
Range alarm	11	11	11	Range upper and lower limits deviation (ALM1/2 indepen-dent operation)	ALn ALn PV
	_	12	_	Range upper and lower limits absolute value	AL2 AL1 PV
	_	13	_	Range upper and lower limits deviation	AL2 AL1
	_	14	_	Range upper limit absolute value and lower limit deviation	SV AL1 PV
	_	15	_	Range upper limit deviation and lower limit absolute value	AL2 SV PV

Timer code


	ALM1	ALM2	ALM3	Alarm type	Operation figure
Timer	32	32	32	ON-delay timer	DI
	33	33	33	OFF-delay timer	DI ALM
	34	34	34	ON/OFF- delay timer	

If change the kinds of parameter, please power ON/OFF PXR.

- Note : (1) Alarm output is ON in the alarm band marked
 - (2) What is alarm with hold?

The alarm is not turned ON immediately even when the measured


value is in the alarm band. It turns ON when it goes out the alarm band and enters again.

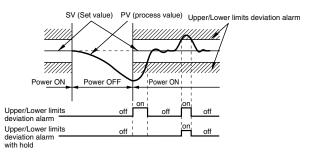

	ALM1	ALM2	ALM3	Alarm type	Operation figure
Upper and lower	16	16	16	Upper and lower limits absolute value	An-L An-H PV
limits alarm	17	17	17	Upper and lower limits deviation	An-L An-H SV
	18	18	18	Upper limit absolute value and lower limit deviation	SV An-H PV
	19	19	19	Upper limit deviation and lower limit absolute value	An-H PV
	20	20	20	Upper and lower limits absolute value (with hold)	An-L An-H PV
	21	21	21	Upper and lower limit deviation (with hold)	An-L An-H PV SV
	22	22	22	Upper limit absolute value and lower limit deviation (with hold)	SV An-H PV
	23	23	23	Upper limit deviation and lower limit absolute value (with hold)	An-H An-L SV
Range alarm	24	24	24	Range upper and lower limits absolute value	An-L An-H PV
	25	25	25	Range upper and lower limits deviation	An-L An-H SV
	26	26	26	Range upper limit absolute value and lower limit deviation	SV An-H PV
	27	27	27	Range upper limit deviation and lower limit absolute value	An-H PV
	28	28	28	Range upper and lower limits absolute value (with hold)	An-L An-H PV
	29	29	29	Range upper and lower limits deviation (with hold)	An-L An-H SV
	30	30	30	Range upper limit absolute value and lower limit deviation (with hold)	SV An-H PV
	31	31	31	Range upper limit deviation and lower limit absolute value (with hold)	An-H An-L SV PV

Function4 Heater burnout alarm (option)

- Heater burnout is detected then the alarm is emitted immediately.
- Separate type current trasformer(CT)specified by Fuji should be used.
 Alarm action point can be set by front papel keys
- Alarm action point can be set by front panel keys.
 Detection is made only on a single-phase heater.
- This function cannot be used when controlling a heater with thyrister phase angle control system.
- Example of the connection of the heater burnout alarm (type PXR5, PXR9)

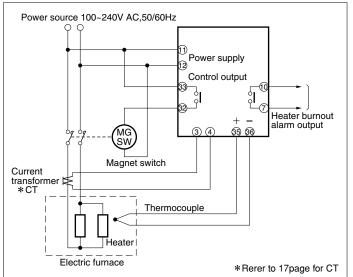

Alarm code for setting value 2 points

[12] Functions

Function5 Parameter mask function

This instrument provides a function (parameter mask function) to mask (conceal) the display of individual parameters.

To effect parameter mask(non-display)or non- mask (display),appropriate values should be set to DSP1-13.

Parameter

C

DSP

DSP3-2

DSP3-4

DSP3-8


Example of setting to (DSP1-13)

- (a) To mask parameter P
 - 1) Check DSP value for Preferring to parameter table
 - 2) Add 2 to the value set to DSP3.
- (b) To mask parametaer P,I,D
 - 1) Check DSP value for P,I,D referring to parameter table.
 - 2) Add 2+4+8=14 to the value set to DSP3.

For allocation of DSP of each parameter, refer to the parameter table on Page18. DSP1-13 cannot be masked.


Function6 Ramp soak function (option)

Function of automatically changing the set point value with the elapsing of time, in accordance with the preset pattern, as shown below. This function is capable of programming a 2 program pattern of 4 steps each, or 1 program parttern \times 8 steps.

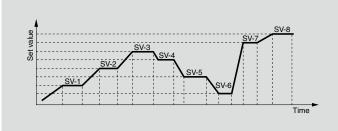

Function7 RS-485 Communication function (option)

With RS-485 (Modbus™ protocol) interface, a connection with computer, touch panel or PLC is allowed.

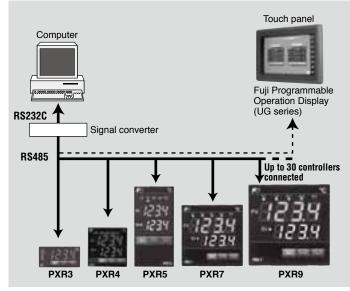

Either communication protocol below is selectable. Selection should be made according to system configuration.

1) ModbusTM RTU mode:

An open protocol generally used in particular outside Japan. In case the host side supports this protocol, connection is allowed without a program.

2) Z-ASCII (Fuji's original)

Because transmission code is ASCII, programming with PLC, etc. is simple.


Function8 Digital input (option)

External digital input allows one of the following functions.

- Change the set value (Front SV, SV1-3)
- Start/stop the control action
- Start/reset the ramp/soak
- Start/stop the auto tuning
 Cancel the alarm latch
- Start the incorporated timer
- * The above functions can be combined when two digital inputs are used.

Function9 Timer function (option)

By Digital input, ON-delay or OFF delay timer can be started. That is, relay output is turned on/off after certain period of time preset in parameter dLY1/dLY2/dLY3. As for relay output, alarm output relays are used. Up to 3 timer outputs can be obtained.

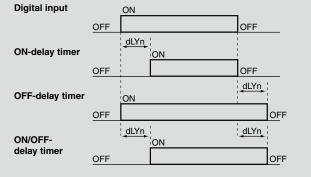


This function is available only with digital input (option).

Function10 Analog Re-transmission (option)


- Output signal : 4 to 20 mA DC
- Kind of output : Any one of process value (PV), set value (SV), manipulated output value (MV) and process variable - set value (DV) (setting by front keys)

A cost corresponding to one temperature sensor can be reduced just by connecting a PV transfer signal to a recorder.

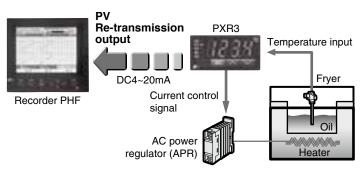

Function11 Remote SV input (option)

- SV (set value) can be selected with signals from outside.
- SV input signal: 1 to 5V DC

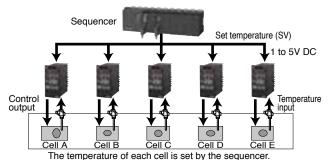



Micro Controller PXR

[13] Sensor fault operation

• Thermocouple

Condition		Display	Control output		
Break	•	ШШШ	ON or more than 20mA (Note OFF or less than 4mA	e)	
Short circuit	$\leftarrow \checkmark$	short-circuit point Temperature display	Input is controlled as short-circuit point (Note temperature.	e)	

Resistance bulb input

Condition		Display	Control output
		ШШШ	ON or more than 20mA (Note OFF or less than 4mA
Break		LLLL	OFF or less than 4mA (Note ON or more than 20mA
		LLLL	ON or more than 20mA (Note OFF or less than 4mA
	2-wire or 3-wire break		
Short circuit		LLL	OFF or less than 4mA (Note ON or more than 20mA

• 1-5V DC


Break	/ /	 OFF or less than 4mA	(Note)
Dicak		ON or more than 20mA	
Short			
circuit	¥		

• 4-20mA DC

Over-range	ШШШ	OFF or less than 4mA (I	Note)
Under-range	LLLL	ON or more than 20mA	


(Note) Control output changes in operation according to the designation of burnout direction (parameter, "P-n1"). In case of Manual Mode, control output signal is MV output value.

Heater burnout alarm current detector (CT)

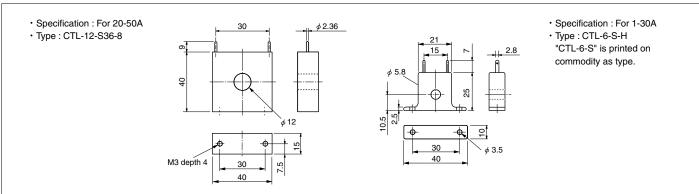

[14] Parameter table Parameter table PXR (1/4)

Parameters for the PXR are classified under three blocks according to the frequency of use. The parameters of the second and third blocks are used at initialization or when they are of absolute necessity. Some parameters may not be displayed at the time of delivery depending on the type.

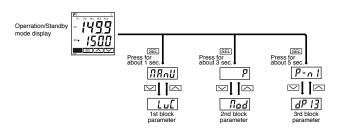

Parameters of the first block

Parameter display symbol	Pa	arameter name		Des	criptio	on				Setting range	Value prior to delivery	User's set value	Parameter mask DSP
ПЯлИ	MAnU	Auto/Manual setting	Switches bet	ween Au	to ar	id Ma	nual m	ode.		n : Manual mode FF : Auto mode	OFF		dSP13-32
5ГЬУ	STby	Standby setting	Switches bet for control.	Switches between RUN a for control.			and Standby			n: Control standby Dutput: OFF, Alarm: OFF) FF: Control RUN	OFF		dSP1-1
[Под	CMod	Remote/Local setting	Switches bet operations.	ween Re	mote	e and	Local			EM : Remote oCL : Local	LoCL		dSP13-8
ProŨ	ProG	Ramp-soak control		Switches between Start, and Hold for ramp-soak					rl	FF: Stop Jn: Start Ld: Hold	OFF		dSP1-2
LREH	LACH	Alarm latch cancel	Cancels the	alarm lat	ch.					: Keeps the alarm latch. : Opens up the alarm latch.	0		dSP1-4
Rſ	AT	Auto-tuning	Used for setting the contained d by auto-tuning.			lsed for setting the constants for P, \tilde{L} , nd d by auto-tuning.			1	OFF (Resets the auto-tuning or does not use it.) ON (Performs the auto-tuning in the SV standard type.) ON (Performs the auto-tuning in low PV type (SV value-10%FS).)	0		dSP1-8
Г П- (TM-1	Timer 1 display	Displays the	remainin	g tim	e of t	mer 1.		-	(Unit: seconds)	-		dSP1-16
<i>ГП-2</i>	TM-2	Timer 2 display	Displays the remaining ti			time of timer 2.			-	(Unit: seconds)	-		dSP1-32
ГП-3	TM-3	Timer 3 display	Displays the remaining t			time of timer 3.		-	(Unit: seconds)	-		dSP1-64	
RL I	AL1	Set value of alarm 1	Sets the value at which alarm 1 is detected.						/hen the alarm type is absolute	10		dSP1-128	
R {-L	A1-L	Lower limit value of alarm 1	Sets the lower I at which alarm		ue		nge. I A1-H to	I A1-L		alue: 0 to 100%FS /hen the alarm type is deviation:	10		dSP2-1
R (- X	A1-H	Upper limit value of alarm 1	Sets the upper at which alarm			to AL:				00 to 100%FS	10		dSP2-2
RL2	AL2	Set value of alarm 2	Sets the value of alarm 2 is deter		h t	0 0 5	×	×	V	/hen the alarm type is absolute	10		dSP2-4
R2-L	A2-L	Lower limit value of alarm 2	Sets the lower l at which alarm		d. 1	6				value: 0 to 100%FS When the alarm type is deviation:	10		dSP2-8
R2-X	A2-H	Upper limit value of alarm 2	Sets the upper at which alarm		t	0 X	0	0		00 to 100%FS	10		dSP2-16
RL3	AL3	Set value of alarm 3	Sets the value a alarm 3 is deter			32				/hen the alarm type is absolute	10		dSP2-32
R3-L	A3-L	Lower limit value of alarm 3	Sets the lower l at which alarm		3	0 O	×	×		alue: 0 to 100%FS	10		dSP2-64
R3-X	А3-Н	Upper limit value of alarm 3	Sets the upper at which alarm		d.		: Settin : Settin		le, _1	/hen the alarm type is deviation: 00 to 100%FS	10		dSP2-128
LoC	LoC	Key lock	Setting of key la All par LoC Front key 0 O 1 × 2 × 3 O 4 × 5 ×	Ameters Comm- unication		u	Comm- nication O O X X x e, X : Si				0		dSP3-1

Micro Controller PXR

[14] Parameter table

Parameter table PXR (2/4)

Parameters of the second block



Parameter display symbol	Pa	rameter name	Description	Setting range	Value prior to delivery	User's set value	Parameter mask DSP
p	Р	Proportional band	Set P to 0.0 to select the ON/OFF control (Two-position control).	0.0 to 999.9%	5.0		dSP3-2
ĩ	i	Integral time	Integration OFF at 0	0 to 3200 seconds	240		dSP3-4
d	d	Differentional time	Differentiation OFF at 0	0.0 to 999.9 seconds	60.0		dSP3-8
XYS	HYS	Hysteresis range for ON/OFF control	Sets the hysteresis for ON/OFF control.	0 to 50%FS	1		dSP3-16
Eool	CooL	Cooling-side proportional band coefficient	Automatically set by auto-tuning function. Selecting 0 switches to cooling-side ON/OFF operation.	0.0 to 100.0	1.0		dSP3-32
db	db	Dead band	Shifts the cooling-side output value.	-50.0 to +50.0	0.0		dSP3-64
ЪЯL	bAL	Manual reset value	Do not modify the default value set at the factory.	-100 to 100%	0.0/50.0		dSP3-128
8r	Ar	Anti-reset windup	Automatically set by auto-tuning function.	0 to 100%FS	100		dSP4-1
Errl	CTrL	Control algorithm	Selects the control algorithm.	Pid: Runs normal PID control. FUZY: Runs PID control with fuzzy logic. SELF: Runs PID control with self-running.	Pid		dSP4-2
SLFb	SLFb	PV (Measured value) stable range	Sets the PV stable range for the self-tuning operation.	0 to 100%FS	2%FS		dSP4-4
anaF	onoF	Setting HYS (Hysteresis) mode	Selects the hysteresis operation at ON/OFF control.	oFF: Starts the two-position control at the values of SV+HYS/2 and SV-HYS/2. on: Starts the two-position control at the values of SV and SV+HYS, or SV and SV-HYS.	ON		dSP4-8
ΓΕ	тс	Cycle time of control output 1	Not shown at 4-20mA DC output	RY, SSR: 1 to 150 seconds (Contact output = 30,SSR/SSC-drive output=2)	30/2		dSP4-16
Γ[2	TC2	Cycle time of control output 2 (cooling-side)	Not shown at 4-20mA DC output	1 to 150 seconds (Contact output = 30,SSR/SSC-drive output=2)	30/2		dSP4-32
p-n2	P-n2	Input signal code	Set this parameter when changing the types of temperature sensors.	1 to 16	Note 1		dSP4-64
P-5L	P-SL	Lower limit of measuring range		-1999 to 9999	Note 1		dSP4-128
P-5U	P-SU	Upper limit of measuring range		-1999 to 9999	Note 1		dSP5-1
Р-дР	P-dP	Setting the decimal point position		0 to 2	Note 1		dSP5-2
PUOF	PVOF	PV (process value) offset	Shift the display of the PV.	-10 to 10%FS	0		dSP5-8
SUDF	SVOF	SV (Setting value) offset	Shift the SV. But the SV display is not changed.	-50 to 50%FS	0		dSP5-16
P-dF	P-dF	Time constant of input filter		0.0 to 900.0 seconds	5.0		dSP5-32
RLN I	ALM1	Alarm type 1	Sets the types of alarm operations.	0 to 34	0/5		dSP5-64
RLNZ	ALM2	Alarm type 2	Sets the types of alarm operations.	0 to 34	0/9		dSP5-128
RL N3	ALM3	Alarm type 3	Sets the types of alarm operations.	0 to 34	0/0		dSP6-1
SERE	STAT	Status display of ramp-soak		-	OFF		dSP6-2
PΓn	PTn	Selecting ramp-soak execute type	Selects ramp-soak patterns.	 Performs 1st to 4th segments. Performs 5th to 8th segments. Performs 1st to 8th segments. 	1		dSP6-4
5ū-1	Sv-1	1st target value/ Switching-SV value	Sets the 1st target SV of ramp-soak operation. / Selected at switching-SV function for DI1	Within the SV limit.	0%FS		dSP6-8
ΓΠ Ir	TM1r	First ramp segment time	Sets the first ramp segment time.	0 to 99h59m	0.00		dSP6-16
ΓΠ ΙS	TM1S	1st soak segment time	Sets the 1st soak segment time.	0 to 99h59m	0.00		dSP6-32

Note 1: When a customer does not specify the settings while ordering, the following settings are selected as factory defaults.

Thermocouple input : Thermocouple K Measured range: 0 to 400°C Resistance bulb input : Measured range: 0 to 150°C

Scaling: 0 to 100%

Voltage/Current input :

Parameter table PXR (3/4)

Parameters of the second block

Parameter display symbol	Pa	arameter name	Description	Setting range	Value prior to delivery	User's set value	Parameter mask DSP
50-2	Sv-2	2nd target SV	Sets the 2nd target SV of ramp-soak operation.	Within the SV limit.	0%FS	 	dSP6-64
ГЛ2r		2nd ramp segment time	Sets the 2nd ramp segment time.	0 to 99h59m	0.00		dSP6-128
<i>FN25</i>		2nd soak segment time	Sets the 2nd soak segment time.	0 to 99h59m	0.00		dSP7-1
5ũ-3	Sv-3	3rd target SV	Sets the 3rd target SV of ramp-soak operation.	Within the SV limit.	0%FS		dSP7-2
ГЛЗг		3rd ramp segment time	Sets the 3rd ramp segment time.	0 to 99h59m	0.00		dSP7-4
глэс		3rd soak segment time	Sets the 3rd soak segment time.	0 to 99h59m	0.00		dSP7-8
5ũ-4	Sv-4	4th target SV	Sets the 4th target SV of ramp-soak operation.	Within the SV limit.	0%FS		dSP7-16
ГПЧг		4th ramp segment time	Sets the 4th ramp segment time.	0 to 99h59m	0.00		dSP7-32
ГЛЧБ		4th soak segment time	Sets the 4th soak segment time.	0 to 99h59m	0.00		dSP7-64
5ũ-5	Sv-5	5th target SV	Sets the 5th target SV of ramp-soak operation.	Within the SV limit.	0%FS		dSP7-128
ГЛSr		5th ramp segment time	Sets the 5th ramp segment time.	0 to 99h59m	0.00		dSP8-1
глээ		5th soak segment time	Sets the 5th soak segment time.	0 to 99h59m	0.00		dSP8-2
5ũ-6	Sv-6	6th target SV	Sets the 6th target SV of ramp-soak operation.	Within the SV limit.	0%FS		dSP8-4
ГПБг		6th ramp segment time	Sets the 6th ramp segment time.	0 to 99h59m	0.00		dSP8-8
глаз		6th soak segment time	Sets the 6th soak segment time.	0 to 99h59m	0.00		dSP8-16
55-7	Sv-7	7th target SV	Sets the 7th target SV of ramp-soak operation.	Within the SV limit.	0%FS		dSP8-32
רחחר		7th ramp segment time	Sets the 7th ramp segment time.	0 to 99h59m	0.00		dSP8-64
<i>ท</i> การ		7th soak segment time	Sets the 7th soak segment time.	0 to 99h59m	0.00		dSP8-128
5ũ-8	Sv-8	8th target SV	Sets the 8th target SV of ramp-soak operation.	Within the SV limit.	0%FS		dSP9-1
ГЛ8г		8th ramp segment time	Sets the 8th ramp segment time.	0 to 99h59m	0.00		dSP9-2
r <i>n</i> 85		8th soak segment time	Sets the 8th soak segment time.	0 to 99h59m	0.00		dSP9-4
Nod		Ramp-soak mode	Selects the power-on start, repeat, and standby functions for ramp-soak operations.	0 to 15	0		dSP9-8

-1234

Parameters of the third block

Parameter display symbol			Description		Value prior to delivery	User's set value	Parameter mask DSP
P-nl	P-n1	Control action	Specifies control action and output at the input burn-out.	0 to 19	0/4		dSP9-16
5 <i>ū-L</i>	Sv-L	SV (Setting value) lower limiter	Sets the lower limit of the SV.	0 to 100%FS	0%FS		dSP9-32
5 . -X	Sv-H	SV (Setting value) upper limiter	Sets the upper limit of the SV.	0 to 100%FS	100%FS		dSP9-64
<u> </u>	dLY1	Delay time 1	Delay time or timer value for alarm 1 relay.	0 to 9999 seconds	0		dSP9-128
dL 42	dLY2	Delay time 2	Delay time or timer value for alarm 2 relay.	0 to 9999 seconds	0		dSP10-1
dL Y3	dLY3	Delay time 3	Delay time or timer value for alarm 3 relay.	0 to 9999 seconds	0		dSP10-2
[Γ	СТ	Current transe display	Displays the current detector input value for HB alarm.	-	-		dSP10-4

Micro Controller PXR

[14] Parameter table

Parameter table PXR (4/4)

Parameters of the third block

Parameter display symbol	Pa	arameter name	Description	Setting range	Value prior to delivery	User's set value	Parameter mask DSP
КЬ	Hb	HB (Set value of heater break alarm) setting	Sets the operation value that detects the heater break.	0 to 50.0A (Setting to 0.0A turns off the HB alarm.)	0.0		dSP10-8
Я (ЬУ	A1hY	Alarm 1 hysteresis	Sets the hysteresis range of ON and OFF of alarm 1.	0 to 50%FS	1		dSP10-16
Ягну	A2hY	Alarm 2 hysteresis	Sets the hysteresis range of ON and OFF of alarm 2.	0 to 50%FS	1		dSP10-32
ЯЗҺУ	A3hY	Alarm 3 hysteresis	Sets the hysteresis range of ON and OFF of alarm 3.	0 to 50%FS	1		dSP10-64
R IoP	A1oP	Alarm 1 options	Sets the optional functions of alarms 1 and 2.	000 to 111	000		dSP10-128
R2oP	A2oP	Alarm 2 options	BBBB L Alarm latch (1: use, 0: not use)	000 to 111	000		dSP11-1
R3oP	A3oP	Alarm 3 options	Alarm of error status (1: use, 0: not use) De-energized output (1: use, 0: not use)	000 to 111	000		dSP11-2
PLE I	PLC1	Lower limit for output 1	Sets the lower limit for output 1.	-3.0 to 103.0%	-3.0		dSP11-4
PHE I	PHC1	Upper limit for output 1	Sets the upper limit for output 1.	-3.0 to 103.0%	103.0		dSP11-8
PLE2	PLC2	Lower limit for output 2	Sets the lower limit for output 2.	-3.0 to 103.0%	-3.0		dSP11-16
PHE 2	PHC2	Upper limit for output 2	Sets the upper limit for output 2.	-3.0 to 103.0%	103.0		dSP11-32
ΡΕυΓ	PCUT	Output limit types	Sets the limit types of outputs 1 and 2 (breaking the limit, or maintained within the limit).	0 to 15	0		dSP11-64
ا ٦٤م	oUT1	Output value (MV) display	Displays the value of output 1.	-	-		dSP11-128
5 ٦٤٥	oUT2	Output value (MV) display	Displays the value of output 2.	-	-		dSP12-1
r[J	rCJ	RCJ (Cold junction compensation) setting	Sets the cold junction compensation function to ON/OFF.	ON: Performs the RCJ (Cold junction compensation). OFF: Does not perform the RCJ (Cold junction compensation).	on		dSP12-2
<u>GR</u> En	GAin	PV gradient		0.001 to 2.000	1.000		dSP12-4
8470	AdJ0	User-definable zero adjustment	Shifts the zero point of input value.	-50 to 50%FS	0		dSP12-8
RdJ5	AdJS	User-definable span adjustment	Shifts the span of input value.	-50 to 50%FS	0		dSP12-16
קין - ו	di-1	DI1 (Digital input 1) operation	Sets the DI1 operations.	0 to 12	0		dSP12-32
dī-2	di-2	DI2 (Digital input 2) operation	Sets the DI2 operations.	0 to 12	0		dSP12-64
SEno	STno	Station No.	Sets the station No. for communication.	0 to 255	1		dSP12-128
ГоЛ	CoM	Parity setting	Sets the parity for communication. (The baud rate is fixed at 9600bps.)	0: Odd parity 1: Even parity 2: No parity	0		dSP13-1
PEoL	PCoL	Communication protocol setting	Switches communication protocol between Modbus and ASCII.	0: Z-ACSII 1: Modbus (RTU)	Depends on the type.		dSP13-2
Ro-ſ	Ao-T	Re-transmission output type	Selecting re-transmission output type.	0: PV / 1: SV / 2: MV / 3: DV	0		dSP13-4
Ro-L	Ao-L	Re-transmission base scale	Setting re-transmission base scale.	-100.0 to 100.0%	0.0		dSP13-4
Ro-X	Ao-H	Re-transmission span scale	Setting re-transmission span scale.	-100.0 to 100.0%	100.0		dSP13-4
r END	rEMO	Remote SV input zero adjustment	Shifts the zero point of input value.	-50 to 50%FS	0		dSP13-16
<i>г</i> ЕЛ5	rEMS	Remote SV input span adjustment	Shifts the span point of the input value.	-50 to 50%FS	0		dSP13-16
r - dF	r-dF	Remote SV input filter constant	Sets the filter constant of remote SV input value.	0.0 to 900.00 seconds	0.0		dSP13-16
r Sū	rSv	Remote SV input value display	Displays the input value of remote SV input.	-	-		dSP13-16
dSP 1 dSP9 dP 10 dP 13	dSP1 dSP9 dP10 dP13	Parameter mask	Sets whether or not to display each parameter.	0 to 255	Ordering specifi- cation		-

MEMO

Digital Thermostat (type:PAS3)

DIN 24×48 mm size

PAS3




An alarm setter with on/off contact output.

- Most suited for detecting overheat in machines, equipments, etc. • Front panel having a DIN size of 24 x 48mm.
- Because thermocouples (5 types) and thermistors (0 to 100°C) are connectable.
- Alarm set value and measured temperature value can be checked promptly using the front keys.
- . This thermostat is capable of issuing 2 relay contact outputs. Therefore, any output of Upper/Lower limit pair, 2 upper limit and 2 lower limit can be selected.
- Mountable to a DIN rail using the DIN rail mounting adapter available at option. With this adapter, also mountable to a wall.

Specifications

Item	Specification
Input	Number of inputs: 1
	Input signal and measurable range: Refer to Table 1.
	Allowable signal source resistance: Thermocouple input 100Ω max.
	Measurement cycle: 2 sec. or less
	Burnout function: Thermocouple input: UUU display
	Thermistor input: LLL display
	(Upscale or downscale at burnout settable)
	Input impedance: Thermocouple input 1 M Ω or higher
	Input filter: 0 to 90 sec. (settable in 1 sec. steps)
	Primary lag filter
	Input value compensation: Settable within ±10% of measurable range
Indication	Indication means: LCD (without back light)
	Value/parameter indication: 4 digits of 7 segments each
	(However, at the 1st digit, only - or 1 is indicated within -999 to 1999.)
	Contents of indication: Measured value, alarm set value 1,
	alarm set value 2, various parameters
	Each indicator of alarms 1 and 2, °C scale
Operation	Number of keys: 3 keys, sheet type keys (embossed)
-	Alarm value setting resolution: 1°C
	Key lock function: (Change of setting can be inhibited.)
Accuracy	Indication accuracy: Refer to Table 1.
	(However, error of a temperature sensor is not included.)
	Reference contact compensation error: ±3°C (at 23°C)
Alarm	Number of outputs: 1 or 2 (as specified in CODE SYMBOLS)
output	Contact structure: 1a contact
	Alarm type: Refer to Table 2.
	Contact capacity: 220 V AC/30 V DC, 2 A (resistance load)
	220 AC/30 DC, 1 A (inductive load)
	Mechanical life of contact: 20 million activations or more (100 activations/min.)
	Electrical life of contact: 100,000 activations or more (rated load)
	Output resetting cycle: 2 sec. or less
	Alarm value settable range: Settable within 0 to 100% of measurable range
	Hysteresis width settable range: 0 to 110% of measurable range
	(settable in 1°C steps)
	Alarm action delay time: Settable within 1 to 120 sec.
Power	Power supply voltage: 100 V (-15%) to 240 V (+10%) AC
supply	50/60 Hz (±10%)
	Power consumption: 3 VA max. (with 100 V AC), 6 VA max. (with 240 V AC)
Operating	Ambient temperature: 0 to 50°C
conditions	Ambient humidity: 90% RH max. (condensation unallowable)
Applicable	UL, C-UL, CE mark.
standards	
Body	Mounting method: Panel flush mounting
structure	External dimensions (H x W x D): 24 x 48 x 85 mm
	Weight: Approx. 100 g
	Casing material: Plastic (corresponding to flame resistance grade UL94V-0)
	Front protective structure: IP66 (corresponding to NEMA-4X) when using
	Fuji's genuine front waterproof packing part
	External terminals: Plug-in type (for bar terminals)
	Finish color: Ivory

Alarm output hysteresis width

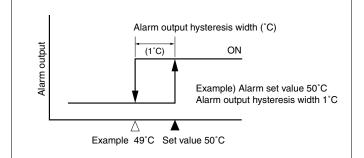

■ Input signal, measurable range and indication accuracy (Table 1)

Input signal		Measurable range (°C)	Minimum resolution	Indication accuracy
Thermocouple	J	0 to 800	1°C	3°C
	K	0 to 1200	1°C	3°C
	R	0 to 1600	4°C	4°C
	Т	0 to 400	1°C	3°C
	E	0 to 600	1°C	3°C
Thermistor	PB-36	0 to 100	1°C	4°C

Note 1) Correct indication is not ensured within a range from 0 to 500°C for an R type thermocouple.

Note 2) Switching between a thermistor and a thermocouple is not allowed. Thermocouple input type can be changed by front key operation.


Alarm types (Table 2)

Code of PA1, 2	Alarm direction	Set value notation	With holding (Note 2)	Relay action at alarm	Action diagram (Note 1)
0	No alarm	-	-	-	
1	Upper limit	Absolute value	No	Relay excitation	
2	Lower limit	Absolute value	No	Relay excitation	
3	Upper limit	Absolute value	Yes	Relay excitation	
4	Lower limit	Absolute value	Yes	Relay excitation	
5	Upper limit	Absolute value	No	Relay non- excitation	
6	Lower limit	Absolute value	No	Relay non- excitation	
7	Upper limit	Absolute value	Yes	Relay non- excitation	
8	Lower limit	Absolute value	Yes	Relay non- excitation	


(Note 1) How to read action

area: A range in which "ALM1 or ALM2" is indicated on LCD at the front. area: A range in which alarm relay is excited

∧ point: Alarm set value The horizontal axis represents measured values (PV)

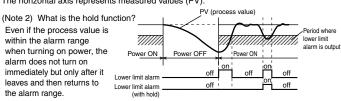

DIN rail mounting

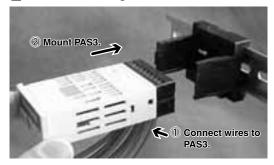

Model

Input signal	Temperature sensor	Number of alarm	Model
Thermocouple	Option	1	PAS3K1Y1
		2	PAS3K1A1
Thermistor	Provided	1	PAS3H1Y1
		2	PAS3H1A1

Optional items

Contents	Model
DIN rail mounting adapter	ZZP*CTK368715P1

Setting at delivery

Measurable range	K thermocouple input (0 to 1200°C)
	Thermistor input (0 to 100°C)
Alarm set value	K thermocouple input: For 1-point alarm
	(upper limit 1200°C)
	K thermocouple input: For 2-point alarm
	(upper limit 1200°C, lower limit alarm 0°C)
	Thermistor input: For 1-point alarm
	(upper limit 100°C)
	Thermistor input: For 2-point alarm
	(upper limit 100°C, lower limit alarm 0°C)
Alarm hysteresis width	1°C
Alarm delay time	0 sec.
Indication	Measured value
Burnout	Upscale at burnout
Input filter	5 sec.
Input value compensation	0%
Nata 1) Outitabing batus on a th	Sata a sa a di sati sa a sa a sata Sa sa di sita sat

Note 1) Switching between a thermistor and a thermocouple is not allowed. Note 2) Thermocouple input type can be changed by front key operation.

Scope of delivery


Thermostat unit, panel-mounting adapter, front waterproof packing Thermistor sensor added for thermistor input

Atached thermistor sensor


Attachment for thermistor-input thermostat

Measurable range	0 to 100°C
B constant	3390 K
Nominal resistance value	6 kΩ (0°C)
Lead wire	Heat-resisting vinyl chloride wire
Lead wire length	500 mm
Lead wire heat resisting temperature	–20 to 105°C
Color code	Black
Accuracy	Within 2°C


• Outline diagram (unit: mm)

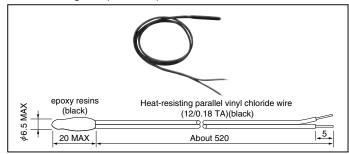


Connection diagram

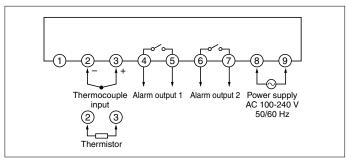


Outline diagram (unit:mm)

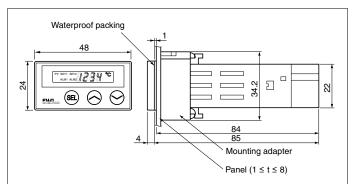

Panel cutout

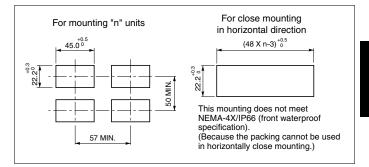

DIN rail mounting adapter (option)

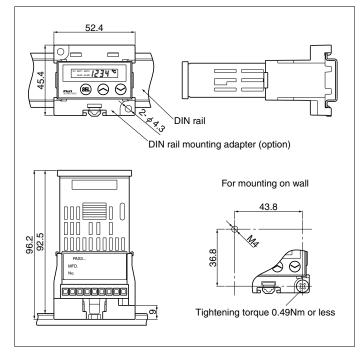

Usable wiring materials

 Wire (TYPE: Single wire) Gauge: AWG28 (0.1 mm²) to AWG16 (1.25 mm²) Strip-off length: 5 to 6 mm
 Bar terminal Dimension of strip-off conductor section: 2 x 1.5 mm or smaller Length of strip-off conductor section: 5 to 6 mm

2MAX.

5 to 6 mm



List of temperature controllers

PX Series

Cla	ssification	3-key type with large	e display				
Тур	e	PXR3	PXR4	PXR7	PXR5	PXR9	
Front view (size mm)	Standard type						
	Waterproof type	PXR3 (48×24)	PXR4	PXR7	PXR5	PXR9	
	Pt100	•					
	J thermocouple	•					
Input signal	K thermocouple	•					
	R thermocouple	•					
	B thermocouple						
	S thermocouple	•					
	T thermocouple	•					
	E thermocouple	•					
	N thermocouple	•					
	PLII thermocouple	•					
	1 to 5V DC	•					
	4 to 20mA DC	 (With resistor) 					
signal	Relay	•					
Output signal	For SSR/SSC drive	•					
õ	4 to 20mA DC	•					
σ	ON-OFF	•					
Control method	PID	•					
ů.	Auto tuning PID	•					
ntro	Fuzzy	•					
ပိ	Self-tuning	•					
<u>.</u>	Heating/cooling control						
	icating accuracy	±0.5% FS ±1digit ±1°0	ز ز				
	municating function (RS-485)	•					
	ansmission output in 4 to 20 mA DC	•					
	ner function						
	ital input						
	mp soak function rm output	• (8 ramp/soak)					
	rm output r burnout alarm (current output unavailable)	 (Unavailable for PX 	(B3)				
	wer supply voltage	100 to 240 V AC, 50/6					
	nt waterproof structure		0112 01 24 V AU/DU				
		-					

PX Series

	Socket	Digital	Classification	
	type	thermostat		
	PXR4 Socket	PAS3	Туре	
	FAR4 SUCKEL	FASS	Туре	
			Standard type	Front view (size mm)
	PXR4	PAS3	Waterproof type	(size mm)
	•	_	Pt100	
	•	•	J thermocouple	
	•	•	K thermocouple	Input signal
	•		R thermocouple	
	•	_	B thermocouple	
		_	S thermocouple	
			T thermocouple	sigi
			E thermocouple	nal
	•	_	N thermocouple	
	•	_	PLII thermocouple	
	•	_	1 to 5V DC	
	• (With resistor)	_	4 to 20mA DC	
	•			Out
	•	_	For SSR/SSC drive	put s
	•	-	4 to 20mA DC	Output signal
	•	•	ON-OFF	_
	•	-		Col
	•	-	Auto tuning PID	Control method
	•	-	Fuzzy	me
	•	-	Self-tuning	thou
	-	_	Heating/cooling control	0
	±0.5% FS ±1digit ±1°C	±3°C	Indicating accuracy	
	-	-	Communicating function (RS-4	485)
	-	-	Re-transmission output in 4 to 20 m	
	-	-	Timer function	
	-	-	Digital input	
	•	_	Ramp soak function	
		•	Alarm output	
	_	-	Heater burnout alarm (current output unava	ailable)
	100 to 240 V AC, 50/60 Hz or 24 V AC/DC	100 to 240V AC	Power supply voltage	.,
		•	Front waterproof struct	ture

SPECIAL ATTENTION NEEDED for all Micro Controller X series products

(Please read carefully the following instructions.)

AWARNING Over-temperature Protection

Any control system design should take into account that any part of the system has the potential to fail.

For temperature control systems, continued heating should be considered the most dangerous condition, and the machine should be designed to automatically stop heating if unregulated due to the failure of the control unit or for any other reason.

The following are the most likely causes of unwanted continued heating:

- 1) Controller failure with heating output constantly on
- 2) Disengagement of the temperature sensor from the system
- 3) A short circuit in the thermocouple wiring
- 4) A valve or switch contact point outside the system is locked to keep the heat switched on.

In any application where physical injury or destruction of equipment might occur, we recommend the installation of independent safety equipment, with a separate temperature sensor, to disable the heating circuit in case of overheating.

The controller alarm signal is not designed to function as a protective measure in case of controller failure.

Fuji Electric Systems Co., Ltd.

International Sales Div.2 Sales Group Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo 141-0032, Japan http://www.fujielectric.com Phone: 81-3-5435-7280, 7281 Fax: 81-3-5435-7425 http://www.fic-net.jp/eng